



EnerFlush - (Engine Oil Flush)



- Eliminates Stiction
- Removes Sludge & Varnish from Critical Engine Components
- Quickly & Safely Cleans Engine Oil Systems for All Engine Oils.
- Cleans HEUI Injectors
- Extends Engine Life
- Helps Improve Fuel Economy

Scan Here To Learn More!



Scan Here To Learn More!

Additional Recommendation: **EnerFlush** - Poor performance can also be the result of engine oil deposits formed on oil controlled components and sensors such as HUEI injectors, Oil Coolers, and sensors. Once per year or every 25K miles an Engine oil flush with EnerFlush is recommended.

Directions: (Every 25,000 Miles or Once per year)

- 1) EnerFlush – Add 2 qt of EnerFlush to 26-32 qts. engine oil. (Can be added to dirty engine oil)
- 2) Run Engine – Run Engine at operating temperature for 30-45 minutes at high idle.
Note: Do not run engine under load.
- 3) Fully drain oil, replace oil filter and add proper amount of fresh oil to crankcase.
- 4) Return to Service.

For More Information
visit www.enertechlabs.com